



**To remove front roof trim:**

1. Remove the roof side trim panel over the side window.
2. Slightly loosen the four Phillips head screws that hold the retaining plate for the folding cot. Then fully remove the two self-locking nuts and screws.
3. Pull the beading (Fig. 7-21) off the roof frame until the beading no longer contacts the front roof panel.

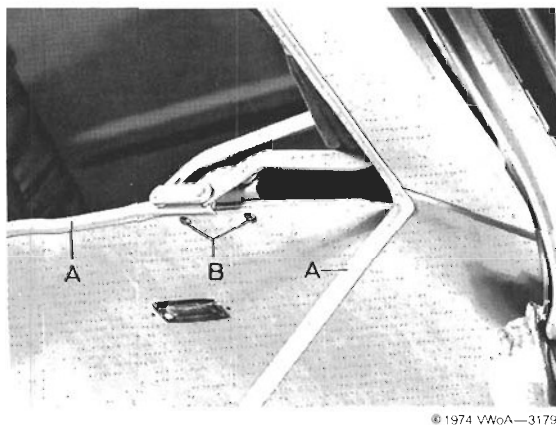


**Fig. 7-21.** Screws with self-locking nuts **B** that must be removed before you can remove beading **A**.

4. Remove the sun visors together with their retainers, the rear view mirror, and the interior lamp. Then remove the Phillips head screws indicated in Fig. 7-22.

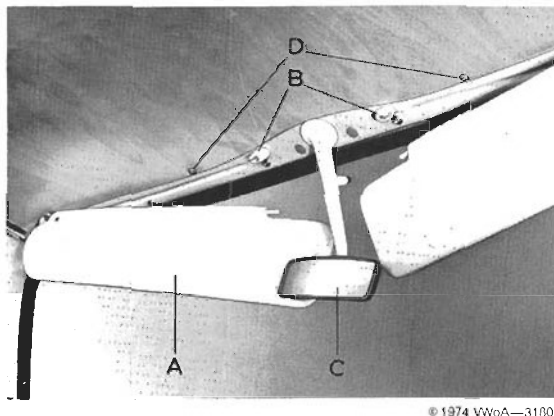

**Fig. 7-22.** Sun visors **A**, retainers **B**, rear view mirror **C**, and Phillips head screws **D**.

5. Pull down the roof front trim panel in the center as shown in Fig. 7-23. Press it out of the retaining channel on one side or the other, then pull the panel out of the retaining channel on the opposite side and remove the panel.

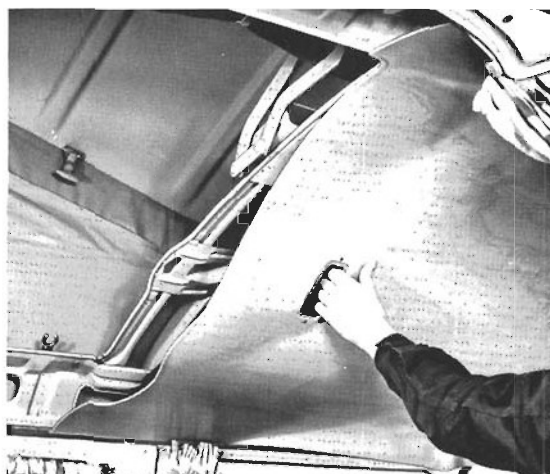


**Fig. 7-23.** Roof front panel being removed.

Installation is the reverse of removal. Install the trim panel in one retaining channel, bend the panel down in the center, then locate it in the other retaining channel. Lift the plate for the folding cot while you install the beading on the edge of the roof frame. Use new self-locking nuts for the cot screws.

**To remove roof rear trim panels:**

1. Remove the roof side trim panels over the sliding door and the side window. Then remove the storage shelf as previously described or remove the luggage net on vehicles that are so equipped.
2. Pull the beading off the front of the roof frame until it no longer contacts the trim panel. Then remove the screws and self-locking nuts indicated in Fig. 7-24.

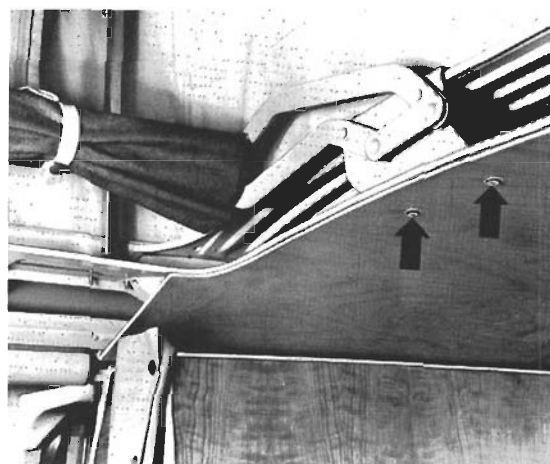

**Fig. 7-24.** Folding cot screws with self-locking nuts (arrows).